


FT-1E/PFT-2E & PC-100

APPLICATION BRIEF

WIRING DIAGRAM

Sensor in FT-1E or
PFT-2E transmitter

Note 2

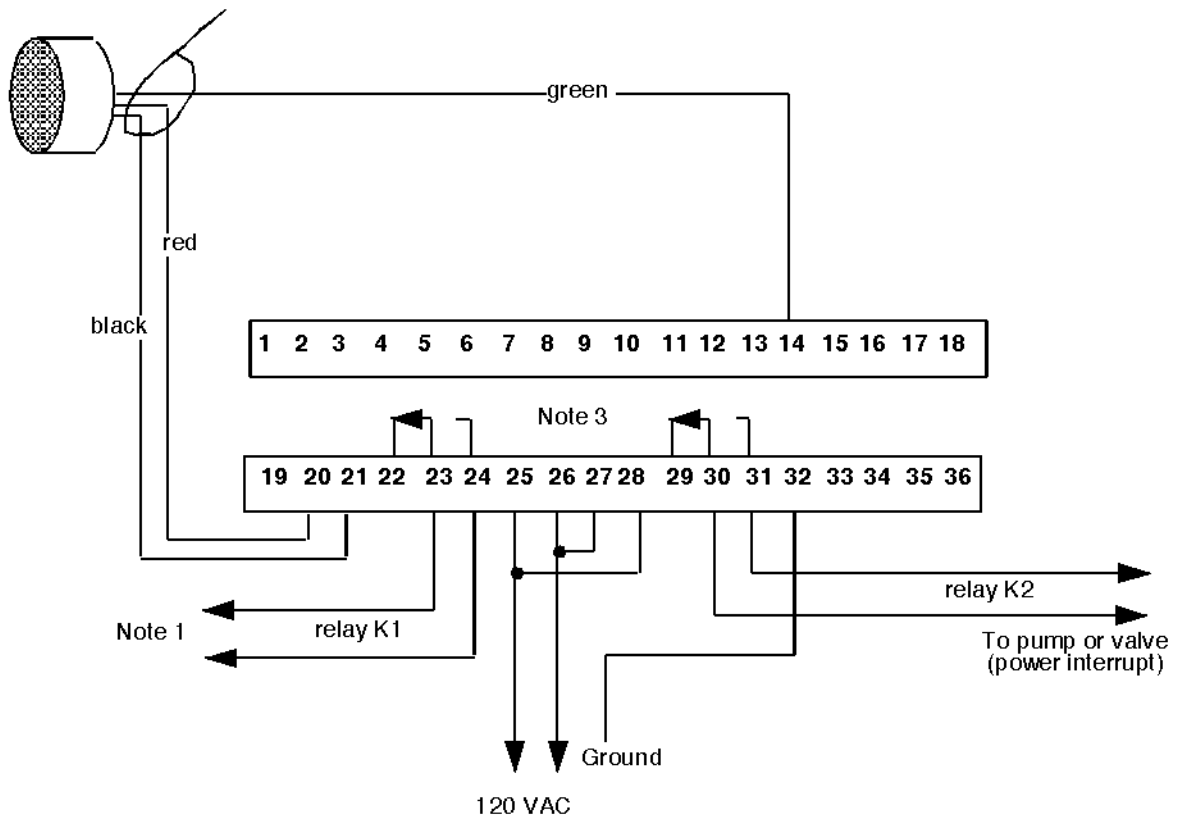

NOTES

1. Refer to page 6 of IOM-036 for connections to K1.
2. Use shielded cable for transmitter connections. Connect shield to terminal 32 only.
3. AC power applied to PC-100. Stop button depressed.



BadgerMeter, Inc.

P. O. Box 245036 Milwaukee, WI 53224-9536
Telephone: (414) 355-0400
Fax: (414) 355-7499