



LESLIE
CONTROLS, INC.

A subsidiary of CIRCOR International, Inc.

12501 Telecom Drive, Tampa Florida 33637

Installation, Operating and
Maintenance Instructions
Supplement

10/2.5.1.E
Rev. 0

AEROFLOW SUPPLEMENT

Special Thermal Growth Trim 2" Aeroflow for TECO

TABLE OF CONTENTS

TABLE OF CONTENTS	1
ILLUSTRATION INDEX.....	1
INSTALLATION	1
MAINTENANCE	1

ILLUSTRATION INDEX

FIGURE 1 - 2" AEROFLOW WITH SPECIAL THERMAL GROWTH TRIM	2
---	---

INSTALLATION

CAUTION!

All warnings from valve IOM must be followed.

NOTE: Refer to Fig. 1 for installation.

1. Install seat gasket (507) into valve body (306).
2. Install seat (506), cage (600), body gasket (305) into valve body (306).
3. Slide the valve plug/stem assembly (505) into the cage (600) slowly.

4. Place the cage load ring (508) centered on the top of the cage.
5. Complete the bonnet (302) installation as stated in the valve IOM being careful to insure alignment of the cage load ring with the recess in the bonnet.

MAINTENANCE

1. During routine maintenance the trim should be carefully inspected for wear and replaced as needed.
2. The valve IOM should be followed for all operating and maintenance procedures.

Applies only to carbon steel valves.

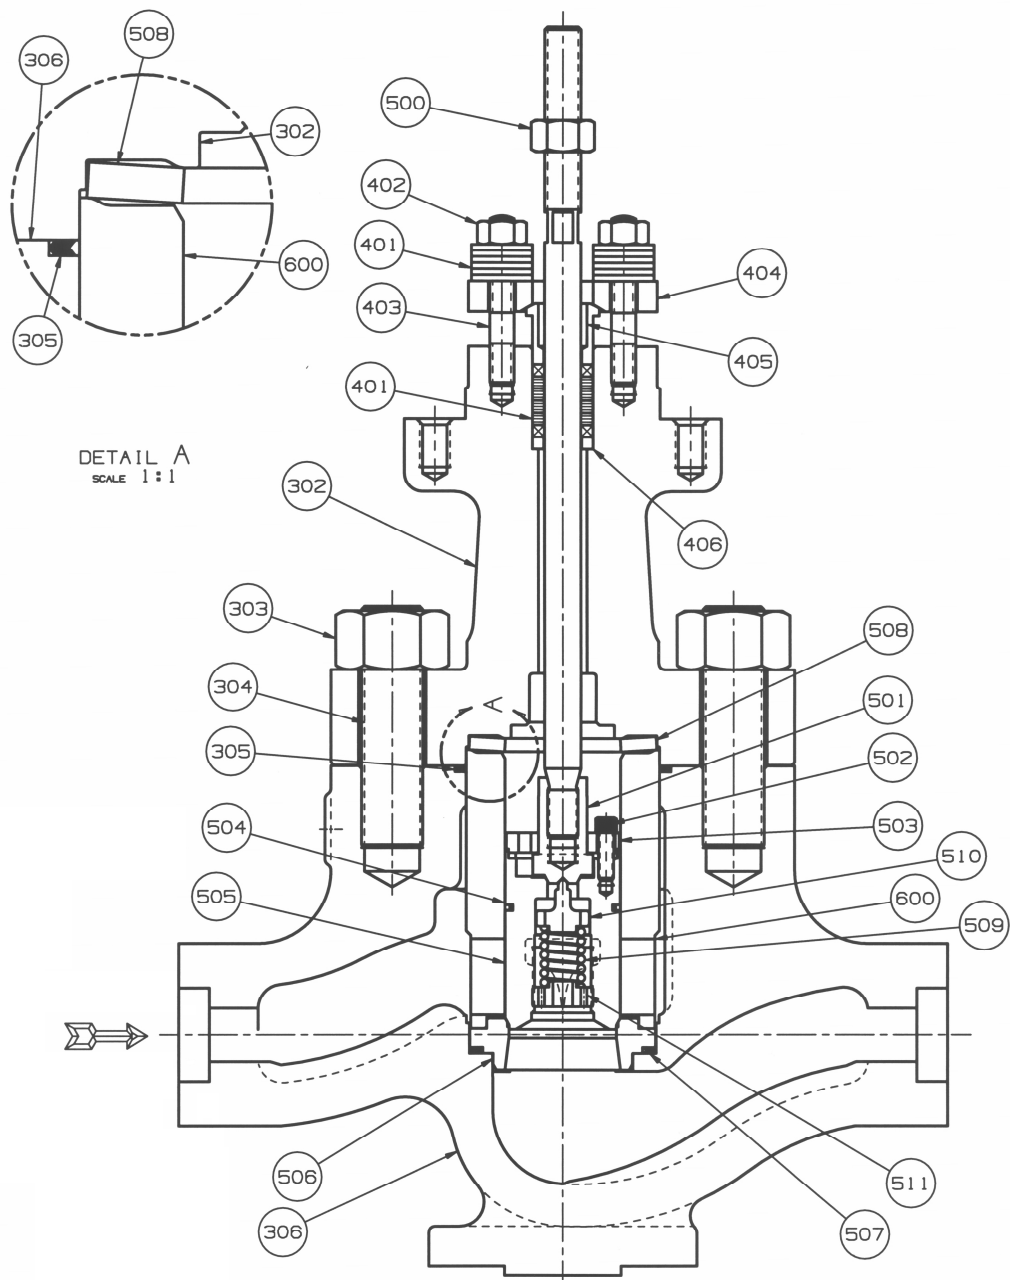


Figure 1 – 2" Aeroflow with special thermal growth trim.