

DIFFERENTIAL PRESSURE SWITCH









FEATURES

- Sealed Metal Bellows Sensors
- Welded 316 Stainless Steel Sensors
- Gasketed Die-Cast Aluminum Enclosure with Epoxy Coating
- Single Switch Output
- Adjustable Ranges:
 30 "Hg Vac to 90 psid (-1 to 6 bar)





OVERVIEW

The J21K differential pressure switch monitors the difference between two system pressures or vacuums and senses excessive flow deviation, or verifies that a filter is clogged.

The J21K's rugged design - with epoxy coated enclosure and sealed metal bellows - lends itself to exacting applications. Widely used in refrigeration (chiller) and compressor applications, the J21K can be used for filter status monitoring and proof of flow.

FEATURES

- Designed to meet Enclosure Type
 4X (with watertight conduit fitting)
- UI listed and cUI certified
- Optional ATEX and Rostechnadzor (GOST-R) intrinsic safety compliance
- Optional adjustable deadband
- Single switch output
- Opposing bellows design



SPECIFICATIONS

STORAGE TEMPERATURE -65 to 160°F (-54 to 71°C)

AMBIENT TEMPERATURE

LIMITS -40 to 160°F (-40 to 71°C); Set point typically shifts less than 1% of

range for a 50°F (28°C) ambient temperature change

SET POINT

REPEATABILITY ±1% of full scale range

SHOCK Set point repeats after 15 G, 10 millisecond duration

VIBRATION Set point repeats after 2.5 G, 5-500 Hz

ENCLOSURE Die cast aluminum, epoxy powder coated, gasketed

ENCLOSURE

CLASSIFICATION Designed to meet enclosure type 4X requirements with M900 option

(watertight conduit fitting)

SWITCH OUTPUT One SPDT snap action switch; switch may be wired "normally open" or

"normally closed"

ELECTRICAL RATING 15 A 125/250/480 VAC resistive. Electrical switches have limited DC

capabilities. Consult factory for additional information.

WEIGHT Approximately 2 lbs. (0.90 kg.)

ELECTRICAL CONNECTION 7/8" diameter conduit hole

PRESSURE CONNECTION Models 127-150, 232-254, 357, 16020: 1/4" NPT (female); models

S127B-S150B, 16021: 1/2" NPT (female)



APPROVALS



UNITED STATES AND CANADA

UL listed, **cUL** certified

UL 508; CSA C22.2, no. 14 File # E42272



EUROPE

Low Voltage Directive (LVD) 73/23/EC & 93/68/EEC

Compliant to LVD

Products rated lower than 50 VAC and 75 VDC are outside the scope of the LVD

Pressure Equipment Directive (PED) 97/23/EC

Compliant to PED

Products rated lower than 7.5 psi are outside the scope of the PED



ATEX Directive (94/9/EC)

II 1G Ex ia IIC T6 Ga (Optional - code M405)

-50°C ≤ Tamb ≤ +60°C

UL International DEMKO A/S (N.B.#0539)

Certificate # DEMKO II ATEX 1105261X EN 60079-0, 60079-11, 60079-26



RUSSIA

Rostechnadzor Permit and GOST-R CoC (Optional - code M406)

0ExialICT6

Tamb = -50C to +60C

NANIO CCVE Certification Center

Certificate # ROSS US.GB05.Bo2933

GOST R 51330.0, 51330.1, 51330.10 & 51330.14

MODEL CHART

Model	Adjustable Set Point Range Low end of range on fall; High end of range on rise		Deadband		Differential Proof Pressure**		Working Pressure*	
	psid (unless noted)	bar	psi (unless noted)	bar (unless noted)	psid	bar	psi (unless noted)	bar
Welded 316L stainless steel bellows with 1/2" NPT (female) pressure connections								
S127B S140B S150B 16021	30 "Hg Vac to 0 0 to 6 0 to 40 1 to 15	-1 to 0 0 to 0,4 0 to 2,8 0,07 to 1,0	0.4 to 0.6 "Hg 0.1 to 0.4 0.3 to 0.7 0.1 to 0.6	13,5 to 20,3 mbar 6,9 to 27,6 mbar 20,7 to 48,3 mbar 6,9 to 41,4 mbar	15 6 300 125	1.0 0,4 20,7 8,6	30 "Hg Vac to 0 30 "Hg Vac to 30 30 "Hg Vac to 300 30 "Hg Vac to 125	-1 to 0 -1 to 2,1 -1 to 20,7 -1 to 8,6
316L welded stainless steel bellows with 1/4" NPT (female) pressure connections								
357	0 to 70	0 to 4,8	2 to 4	0,1 to 0,3	70	4,8	30 "Hg Vac to 350	-1 to 24,1
Brass bellows with 1/4" NPT (female) pressure connections								
127 140 150 16020	30 "Hg Vac to 0 0 to 6 0 to 40 1 to 15	-1 to 0 0 to 0,4 0 to 2,8 0,07 to 1,0	0.4 to 0.6 "Hg 0.1 to 0.4 0.3 to 0.7 0.1 to 0.6	13,5 to 20,3 mbar 6,9 to 27,6 mbar 20,7 to 48,3 mbar 6,9 to 41,4 mbar	15 6 40 125	1.0 0,4 2,8 8,6	30 "Hg Vac to 0 30 "Hg Vac to 30 30 "Hg Vac to 180 30 "Hg Vac to 125	-1 to 0 -1 to 2,1 -1 to 12,4 -1 to 8,6
Phosphor bronze bellows with 1/4" NPT (female) pressure connections								
232 254	0 to 25 0 to 90	0 to 1,7 0 to 6,2	0.6 to 1 2 to 4	41,4 to 68,9 mbar 0,1 to 0,3	25 90	1,7 6,2	30 "Hg Vac to 110 30 "Hg Vac to 200	-1 to 7,6 -1 to 13,8

^{*}Working Pressure Range: The pressure range within which two opposing sensors can be safely operated and still maintain set point adjustability.

** Differential Proof Range: The maximum differential pressure to which a pressure sensor may be occasionally subjected, which causes no permanent damage.

The unit may require calibration (e.g. start up, testing)



HOW TO ORDER

BUILDING A PART NUMBER

s" section	
Determine option number based on switch output, optional materials or other product enhancements. Fill in the option portion of your part number with the corresponding number. Leave "option" portion blank if no options are needed.	
resp on b	

-:	–	_	

Differential Pressure Type J21 K - one SPDT output, internal adjustment with no reference dial.

SWITCH OPTIONS*

TYPE

0140	Gold contacts, 1 A 125 VAC resistive
0500	Close deadband, 5 A 125/250 VAC resistive
1520	Adjustable deadband, 15 A 125/250/277 VAC resistive; adjustment wheel changes rise setting only. If adjustment on fall setting is required use primary adjustment
1535	High ambient, 15 A 125/250 VAC resistive; temperatures up to 250°F (121°C)
1537	Vapor sealed switch, 15A 125/250 VAC resistive

OTHER OPTIONS

M201	Factory set one switch; specify increasing or decreasing pressure and set point
M277	Range indicated on nameplate in kPa or MPa, factory selected
M278	Range indicated on nameplate in Kg/cm ²
M405	European ATEX Intrinsic Safety compliance
M406	Intrinsic safety compliance per Russian Rostechnadzor (GOST-R)
M444	Paper ID tag
M446	Stainless steel ID tag & wire attachment
M550	Oxygen service cleaning; alcohol cleaning to remove residue from the process connection. NOT AVAILABLE MODEL 254
M900	Watertight conduit fitting; converts $7/8$ " hole to $1/2$ " NPT fitting. Required for product to meet Enclosure Type 4X


^{*}All switches have limited DC capabilities. Consult factory for details.

DIMENSIONAL DRAWINGS

Dimensional drawings for all models may be found at www.ueonline.com

Type J21K

INTERNAL SET POINT ADJUSTMENT

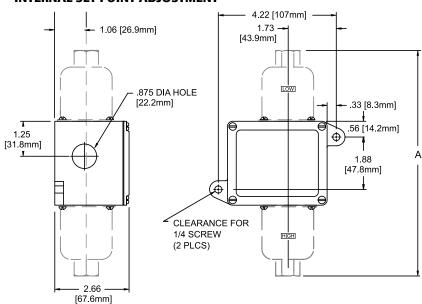


Dimension A					
Models	Inches	mm	NPT		
127-16020	8.06	204.7	1/4		
S127B-16021	8.86	225.0	1/2		
232	6.53	165.9	1/4		
254	6.50	165.1	1/4		
357	6.88	174.8	1/4		


All dimensions stated in inches (millimeters)

PRESSURE SENSORS




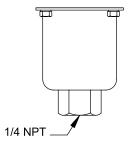


Model S127B-16021




Model 232



Model 254

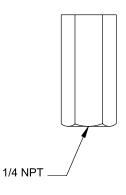

Model 357



RECOMMENDED PRACTICES AND WARNINGS

United Electric Controls Company recommends careful consideration of the following factors when specifying and installing UE pressure and temperature units. Before installing a unit, the Installation and Maintenance instructions provided with unit must be read and understood.

- To avoid damaging unit, proof pressure and maximum temperature limits stated in literature and on nameplates must never be exceeded, even by surges in the system. Operation of the unit up to maximum pressure or temperature is acceptable on a limited basis (e.g., start-up, testing) but continuous operation must be restricted to the designated adjustable range. Excessive cycling at maximum pressure or temperature limits could reduce sensor life.
- A back-up unit is necessary for applications where damage to a primary unit could endanger life, limb or property. A high or low limit switch is necessary for applications where a dangerous runaway condition could result.
- The adjustable range must be selected so that incorrect, inadvertent or malicious setting at any range point cannot result in an unsafe system condition.
- Install unit where shock, vibration and ambient temperature fluctuations will not damage unit or affect operation. When applicable, orient unit so that moisture does not enter the enclosure via the electrical connection. When appropriate, this entry point should be sealed to prevent moisture entry.
- Unit must not be altered or modified after shipment. Consult UE if modification is necessary.
- Monitor operation to observe warning signs of possible damage to unit, such as drift in set point or faulty display. Check unit immediately.
- Preventative maintenance and periodic testing is necessary for critical applications where damage could endanger property or personnel.
- Electrical ratings stated in literature and on nameplate must not be exceeded. Overload on a switch can cause damage, even on the first cycle. Wire unit according to local and national electrical codes, using wire size recommended in installation sheet.
- Do not mount unit in ambient temp. exceeding published limits.

LIMITED WARRANTY

Seller warrants that the product hereby purchased is, upon delivery, free from defects in material and workmanship and that any such product which is found to be defective in such workmanship or material will be repaired or replaced by Seller (Ex-works, Factory, Watertown, Massachusetts. INCOTERMS); provided, however, that this warranty applies only to equipment found to be so defective within a period of 24 months from the date of manufacture by the Seller. Seller shall not be obligated under this warranty for alleged defects which examination discloses are due to tampering, misuse, neglect, improper storage, and in any case where products are disassembled by anyone other than authorized Seller's representatives. EXCEPT FOR THE LIMITED WARRANTY OF REPAIR AND REPLACEMENT STATED ABOVE, SELLER DISCLAIMS ALL WARRANTIES WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

LIMITATION OF SELLER'S LIABILITY

SELLER'S LIABILITY TO BUYER FOR ANY LOSS OR CLAIM, INCLUDING LIABILITY INCURRED IN CONNECTION WITH (I) BREACH OF ANY WARRANTY WHATSOEVER, EXPRESSED OR IMPLIED, (II) A BREACH OF CONTRACT, (III) A NEGLIGENT ACT OR ACTS (OR NEGLIGENT FAILURE TO ACT) COMMITTED BY SELLER, OR (IV) AN ACT FOR WHICH STRICT LIABILITY WILL BE INPUTTED TO SELLER, IS LIMITED TO THE "LIMITED WARRANTY" OF REPAIR AND/OR REPLACEMENT AS SO STATED IN OUR WARRANTY OF PRODUCT. IN NO EVENT SHALL THE SELLER BE LIABLE FOR ANY SPECIAL, INDIRECT, CONSEQUENTIAL OR OTHER DAMAGES OF A LIKE GENERAL NATURE, INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS OR PRODUCTION, OR LOSS OR EXPENSES OF ANY NATURE INCURRED BY THE BUYER OR ANY THIRD PARTY.

UE specifications subject to change without notice.

U.S. SALES OFFICES

United Electric Controls 31 Old Stage Road Hampton Falls, NH 03844 Phone: 617-899-1132

email: northeastsales@ueonline.com

United Electric Controls 28 N. Wise Ave. Freeport, IL 61032 Phone: 815-341-2588 email: midwestsales@ueonline.com

United Electric Controls 1022 Vineyard Drive Conyers, GA 30013 Phone: 770-335-9802

email: southeastsales@ueonline.com

United Electric Controls 5829 Grazing Court Mason, OH 45040 Phone: 513-535-5486

email: midatlanticsales@ueonline.com

United Electric Controls 102 Salazar Court Clayton, CA 94517 Phone: 925-408-5997

email: westcoastsales@ueonline.com

United Electric Controls 27 Summit Terrace Sparta, NJ 07871 Phone: 973-271-2550 email: easternsales@ueonline.com

United Electric Controls 33018 Weatherby Court

Fulshear, TX 77441 Phone: 832-457-6138

email: southwestsales@ueonline.com

CANADA

EASTERN 68 Mosley Crescent Brampton, Ontario Canada L6Y 5C8 Phone: 905-455-5131 FAX: 905-455-5131

INTERNATIONAL OFFICES

CHINA

United Electric Controls, Shanghai Office Room 1011, 10th Flr, Huai Hai Zhonghua Building No. 885, Renmin Road, Luwan District Shanghai 200010, P.R. China Phone: +8621-6255 8059 email: chinasales@ueonline.com

Block B, Room 1102, Caizhi Inernational Building, No. 18 Zhong Guancun East Road, Haiden District Beijing, China 100080 Phone: +86 (-10) -62800956 email: beijingsales@ueonline.com

United Electric Controls, Beijing Office

EUROPE

United Electric Controls 05-806 Komorow Kujawska 5, Poland Phone: +48 22 499 4804

email: easterneuropesales@ueonline.com

INDIA

United Electric Controls 402, Aries Avenue – 1, 58-United Colony Sama, Baroda, India 390 008 Phone: +91 (-265) -3191711 email: indiasales@ueonline.com

ASIA-PACIFIC

United Electric Controls, Far East No. 1-2-2, 2nd Floor Jalan 4/101C Cheras Business Centre Batu 5, Jalan Cheras 56100 Kuala Lumpur, Malaysia Phone: 603-9133-4122

email: fareastsales@ueonline.com

MEXICO

United Electric Controls Zacatecas # 206, Suite 20 Col Guadalupe CP 89120 Tampico, Tamaulipas Mexico Phone: 833-132-3726 email: latinamericasales@ueonline.com

RUSSIA & SCANDINAVIA

United Electric Controls, Moscow Kuusinena str., 19A, Office 310 Moscow, 125252, Russia Phone: +7 (095) 792-88-06 email: russiansales@ueonline.com



180 Dexter Avenue, P.O. Box 9143 Watertown, MA 02471-9143 USA Telephone: 617 926-1000 Fax: 617 926-2568 http://www.ueonline.com